

Required tools

- Impact drill
- Rock drill D=10mm
- Spanner SW13 / SW10
- Level
- Metal saw
- Screw driver (cross)
- Tape measure

Preparation

- All water and flushing connections have to be switched off and fitted with a flush sitting blanking plug
- Electrical control units and connections must be disconnected
- Make sure the wall socket is in perfect condition before starting the installation. Replace any parts required if necessary
- In order to install Bocelli Waterless you need DN50 pipe for the wall installation. It is not recommended to use smaller cross section than DN50 pipe for the installation.
- Remove the old mounting of the urinal basin and the wall connection if necessary.

Included in the package

- **Urinalbecken Senza Aqua - Ceramic compact**
Artikelnummer: SA-MC-01-C
- **Montageset**
Artikelnummer: SA-MC-MON
Einzelteile:
 - 2 x Montagewinkel
 - 2 x Dübel 10 mm
 - 2 x Sechskant Schraube SW 13
 - 2 x Kunststoffhülse
 - 2 x Befestigungsschraube 6 x 30
 - 2 x Abdeckkappe
- **Auffangsieb**
Artikelnummer: SA-MC-AS
- **HT Rohrset**
 - 2 x DN 50 / 87°
 - 1 x DN 50 / 150
- **Sperrflüssigkeit Senza Aqua - Liquid**
Artikelnummer: SA-Z-SAL
- **Duftsteine - Senza Aqua - Fresh n Clean**
Artikelnummer: SA-Z-FC


Manufacturer

Senza Aqua AG, Hafenstrasse 20, CH-8280 Kreuzlingen

Telefon +41 (0) 716 723 552
Telefax +41 (0) 716 723 553
eMail email@senzaaqua.com
Internet www.senzaaqua.com

All dimensions, pictures and technical data have been carefully created.
 We receive the right to modify or change the information at any time.
 © 2013

1

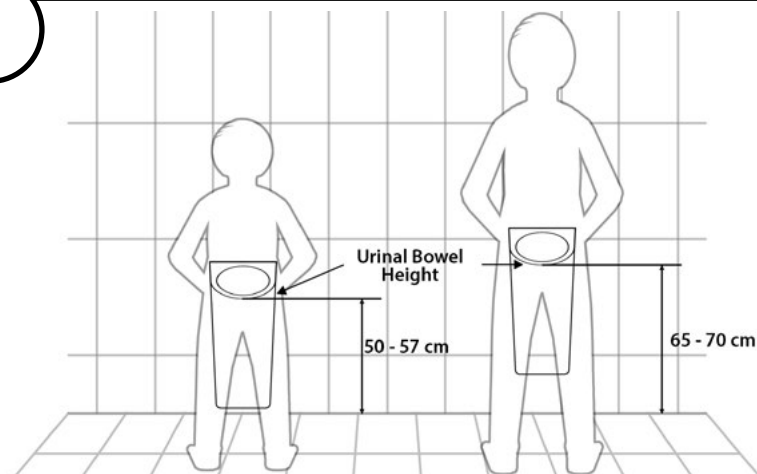

The correct assembly height depends on the age of the users.


The following table is used as a guide to determine the recommended urinal bowl height for the different age groups. The recommended height is 65cm.

Age	Urinal bowl height	Height of the dowel holes (= the height of the urinal bowl - 3 cm)
Adults	65cm	62cm
Youth	57cm	54cm
Children up to 10 yrs.	50cm	47cm



Select the desired height of the urinal bowl and determine the correct height for the dowel holes.

2

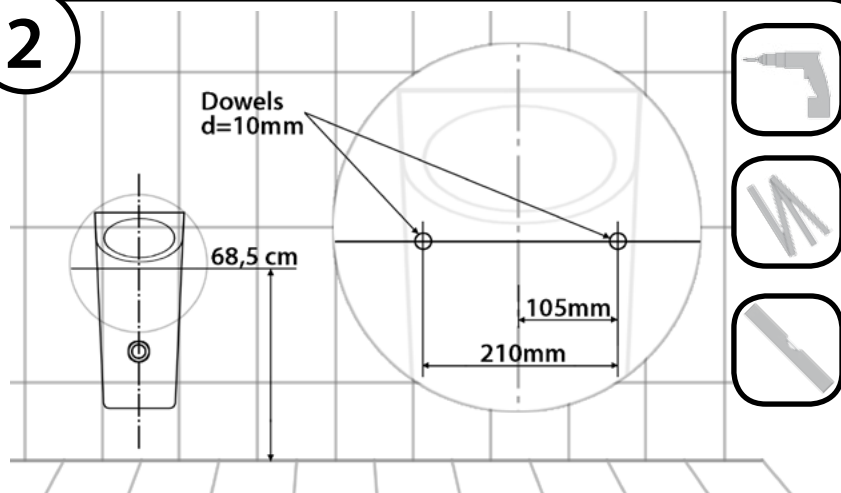

For the required bowl height of 65cm the dowel holes need to be 62 cm high



Put the dowels 210mm apart from each other.



Measure the dowel holes (62cm from the floor) and use a level to get a straight line. Draw a straight line.





Mark the dowel holes on the line 210mm apart from each other.




Drill two dowel holes (d=10mm).


3

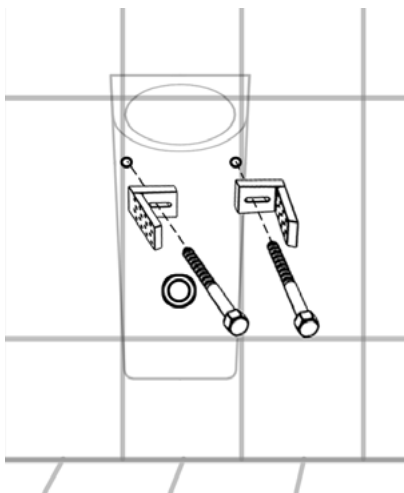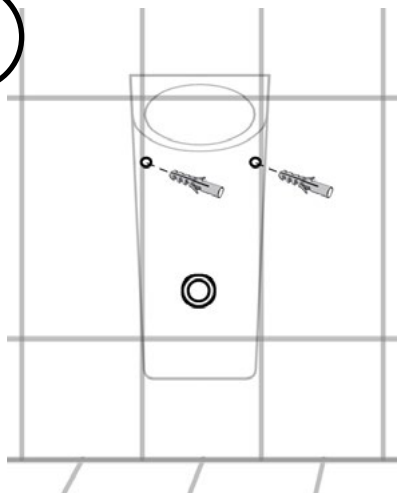


- a** Put the dowels in the drill holes
- b** Use the hexagon screws to fasten the plastic wall bracket to the wall. Check the alignment with a level before tightening.

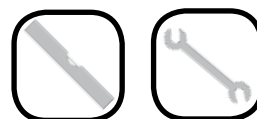

4

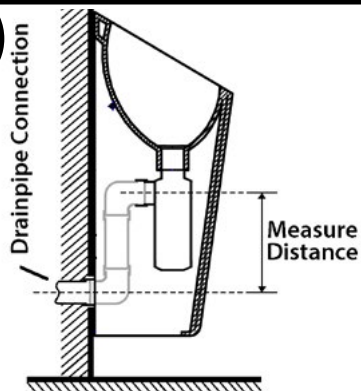


Cut to required lengths

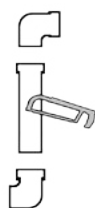


Apply HT Lubricant



Connect cut pipe sections



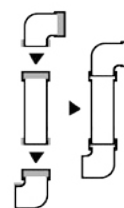


Install

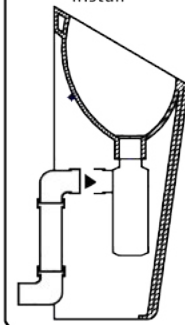



- a** Measure the distance between discharge opening and the wastewater connection. Make sure that there is a minimum slope of 2 degrees of the discharge opening for sewage connection.
- b** Cut the DN50 x 1450 HT pipes into required lengths. Put some lubricant on the connecting edges.
- c** Connect the individual pipe sections and then insert into the end of the urinal. Make sure that the pipe seals tightly.

5

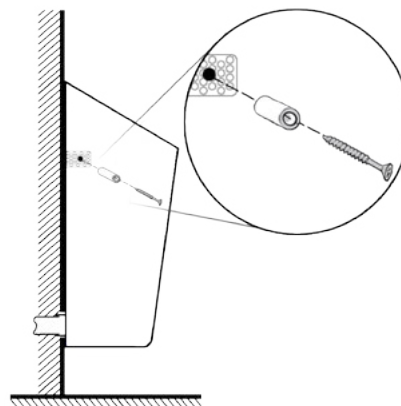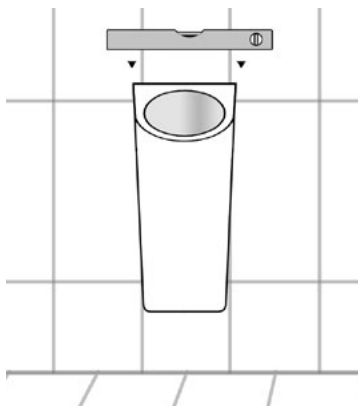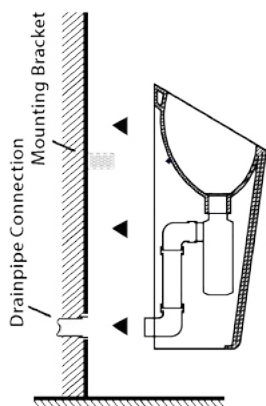

- a** Connect the drainpipe into the wall and at the same time position the urinal on the mounting bracket.
- b** Check the alignment of the urinal with a level.
- c** Fasten the urinal to the mounting bracket with the supplied screws and plastic sleeves.

6

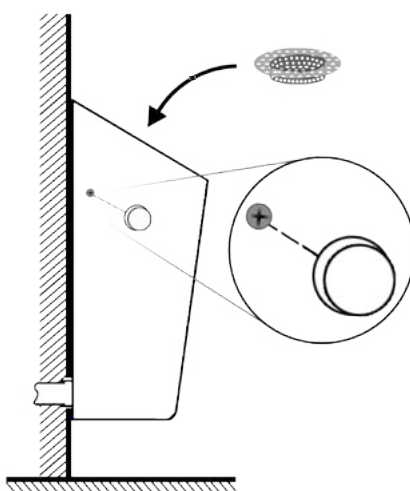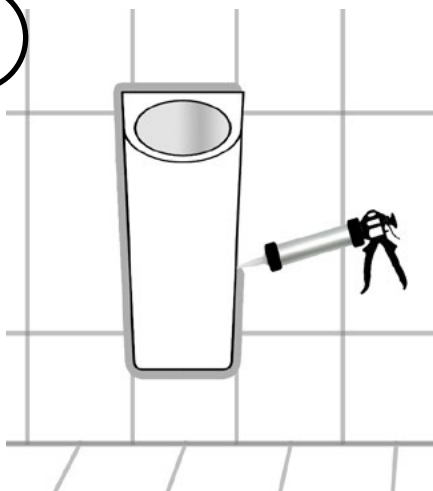

- a** For hygiene reasons it is recommended to seal the joint between the urinal and the wall mounting with silicone.
- b** Rinse the urinal with about 5 litres of cold water and then add 150 ml of the sealing liquid.
- c** Hide the screw heads by using the cover caps and place the strainer into the bowl.
- d** Once the fragrance sticks have been added the urinal is ready for use.